


AEKE

AEKE K1
Smart Home Gym
User Manual

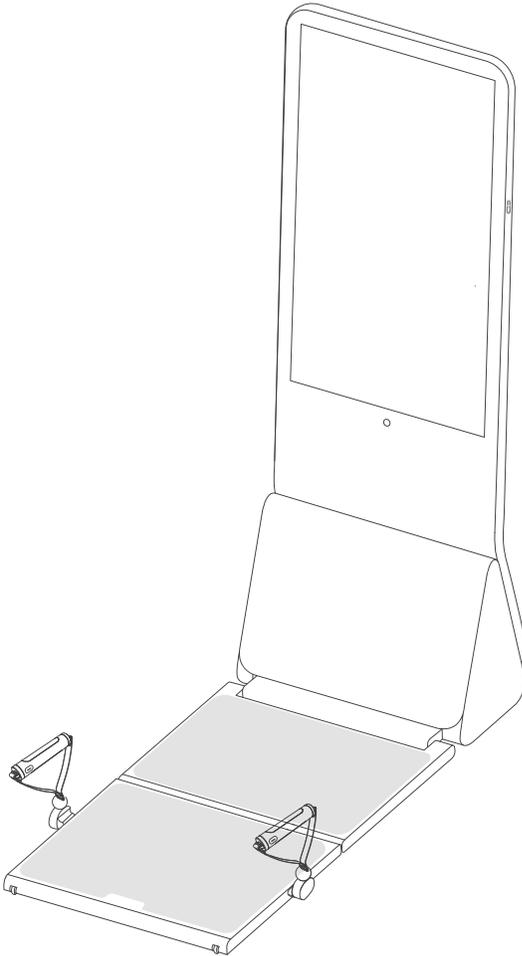

WELCOME TO AEKE

Thank you for choosing the AEKE K1
Smart Home Gym.

How to get support?

We are here to help whenever you need us. You can
contact us in the following ways:

 **WEBSITE:** www.aeke.com

 **EMAIL:** support@aeke.com

DISCLAIMER

Qudong Future (Shenzhen) Technology Co., Ltd., hereinafter referred to as "the Company," and the AEKE Smart Home Gym K1 and its related accessories, hereinafter referred to as "the Product."

To protect your legal rights, please carefully read this manual and its disclaimer before using the Product. You are required to use the Product strictly in accordance with the instructions provided herein. By activating and using the Product, you are deemed to have read, understood, acknowledged, and accepted all terms and conditions of this manual and its disclaimer. Users undertake to be responsible for their own actions and all consequences arising therefrom. Users agree to use the Product solely for legitimate purposes and to comply with any current or future policies or guidelines established by the Company.

During the use and maintenance of the Product, you must strictly adhere to and follow all requirements outlined in this manual, including but not limited to its instructions. The Company shall not be liable for any personal injury, accidents, property damage, legal disputes, or other adverse events resulting in conflicts of interest caused by failure to follow these instructions or due to unforeseeable circumstances beyond our control. The Company shall not bear any responsibility for any actions arising directly or indirectly from the use of the Product that violate applicable laws or regulations. Users shall assume full responsibility and liability for such incidents and losses. If any operation seems overly complex or unsafe, we recommend contacting our support team for professional guidance.

CONTENTS

01 | Safety Information 01

02 | Product Overview

Product Diagram	06
Specifications	07
Package Contents	08

03 | Installation and Placement

Unpacking	10
Moving	12
Placement	13

04 | Product Operation

Power On/Off	14
Standby Mode	14
Bluetooth Connection	15
Wi-Fi Setup	16
Footboard Unfolding and Folding	17
Footboard Safety Warnings	18

05 | Accessories Overview

SMART GRIPS	19
CROSS-BAR & UNLOADER	22
Smart 8 Electrode Scale	24

Heart Rate Armband	24
Camera Cover	27
Backup Cord	28

06 | **Troubleshooting**

SN Lookup	29
Common Issues	29
Technical Support	30

07 | **Maintenance and Care**

Device Cleaning	31
Screen Maintenance	31
Power Maintenance	31
Cable Replacement	31
Prohibitions	32
Precautions	32

08 | **Warranty and After-Sales Service** 32

09 | **Return and Refund policy** 35

10 | **FCC&CE Statement** 37



SAFETY INFORMATION.

01

The AEKE K1 Smart Home Gym is a digital strength training device with significant weight and motors capable of generating substantial resistance (2-50 kg per side). Improper use of the Product or its accessories may result in equipment damage or personal injury.

- Before using the Product, please inspect it and its accessories for any damage. If any abnormalities are detected, discontinue use immediately and contact official customer service.
- Do not attempt to repair the Product yourself, and disassembly is strictly prohibited.
- Do not remove or damage the warning labels or signage on the Product or its accessories. If labels or signage are found to be damaged, illegible, or removed, please contact official customer service.

Installation Safety



GROUND REQUIRED



KEEP AREA CLEAN

- Install the Product strictly according to the requirements of this user manual. Place it on a stable, level surface to ensure its stability.
- Ensure the area around the Product is free of clutter, heavy objects, items that could fall, or anything that might affect its stability or damage the mirrored screen.
- Position the Product on a hard floor surface (e.g., marble, hardwood, or tile). Do not place it on soft surfaces such as carpets or felt.

Electrical Safety



NO FLAMMABLES



NO DAMP



NO OPEN FLAME

- The Product is not waterproof and must be used in a dry, well-ventilated environment. Do not splash water on it, and prevent water from entering the power port, mirrored screen, or internal gaps between the frame to avoid short circuits or other damage.
- During severe weather conditions such as thunderstorms, unplug the power cord to prevent damage to the Product.
- Use only power outlets certified for safety by national standards, and avoid overloading electrical circuits.
- Use the original power cord provided with the Product. Do not use power equipment from other brands to power the Product.
- Keep the Product away from high electromagnetic interference environments, such as mobile phone base stations or high-power transmission devices, during use.
- If you notice unusual noises, odors, smoke, or any other irregularities during use, immediately turn off the power, unplug the cord, and contact official customer service.

Operational Safety

- Avoid striking, pressing, or applying external force to the touch screen. Do not scratch or damage it, as this may cause it to crack or shatter.
- Before using the Product, wear appropriate workout clothing and shoes. Avoid loose-fitting garments or any equipment, jewelry, or accessories that may pose a safety risk during exercise.

Child and Pet Safety

- Minors should only use the Product under the supervision and guidance of a guardian.
- Position the Product with its mirrored side facing a wall to avoid placement in pathways frequented by children or pets.
- Prevent children or pets from climbing on the Product, which could cause it to tip over.
- Ensure children and pets do not play, chase, jump, or interact with the Product in any way that could lead to tipping or damage.

Unsuitable Users



Please Consult a Doctor If You Fall Into the Following Categories Before Using This Product!

To ensure your safety, individuals with the following conditions or circumstances must consult a doctor to determine if this product is suitable for use:

- Individuals aged 65 or older;
- Pregnant women or women in the perinatal period;
- Individuals undergoing medical treatment and/or taking medication;
- Individuals with any chronic diseases or physical injuries;
- Individuals with hypertension, heart disease, cerebral infarction, insufficient cerebral blood supply, or other cardiovascular or cerebrovascular diseases;
- Individuals with diabetes, hypoglycemia, gout, or other metabolic disorders;
- Individuals with asthma, other respiratory diseases, or any other chronic conditions;
- Individuals with muscle or ligament injuries, myofascial injuries, arthritis or joint injuries, connective tissue diseases, soft tissue injuries, or other orthopedic conditions;
- Individuals with any acute or chronic physical injuries (including during recovery);
- Individuals with limb coordination disorders, central nervous system disorders, peripheral vascular or neurological conditions;
- Individuals lacking full legal capacity for civil conduct;
- Individuals under the influence of alcohol, experiencing fatigue, post-high-intensity work, irregular sleep patterns, or physical discomfort;
- Individuals in stuffy or high-temperature environments, to avoid heatstroke or other physical harm.

Safety Precautions

- During the use of this product, please wear the provided heart rate armband to monitor your heart rate in real-time, ensuring that your exercise intensity remains within a safe and tolerable range. Pay attention to controlling the duration, intensity, frequency, and number of repetitions of your workouts to avoid exceeding your physical capacity with prolonged high-intensity exercise, which could lead to exercise-related injuries.
- If you experience any discomfort during exercise, such as chest tightness, dizziness, pain in any part of your body, difficulty breathing, or any other unusual symptoms, stop using the product immediately, cease exercising, and seek medical attention promptly. Before resuming use of the product, consult a doctor to confirm whether it is safe for you to continue.
- If you have an implanted cardiac pacemaker, defibrillator, or other medical devices, consult your doctor to determine if it is safe for you to use this product for exercise and training. Certain components and the wireless radio within this product emit electromagnetic fields, which may interfere with pacemakers, defibrillators, or other medical devices. If your doctor approves your use of this product for exercise and training, ensure a safe distance between your medical device and the product, and further consult your doctor and the medical device manufacturer for information specific to your device.
- If you suspect that this product is interfering with your pacemaker, defibrillator, or other medical devices, stop using the product immediately.




PRODUCT OVERVIEW.

02


Product Diagram

1. Power Button
2. Footboard Button
3. 4K UHD Screen
4. AI Camera
5. Front Cover
6. 2.1 Speakers L/R
7. Rear Footboard
8. Front Footboard
9. Cord Buckle

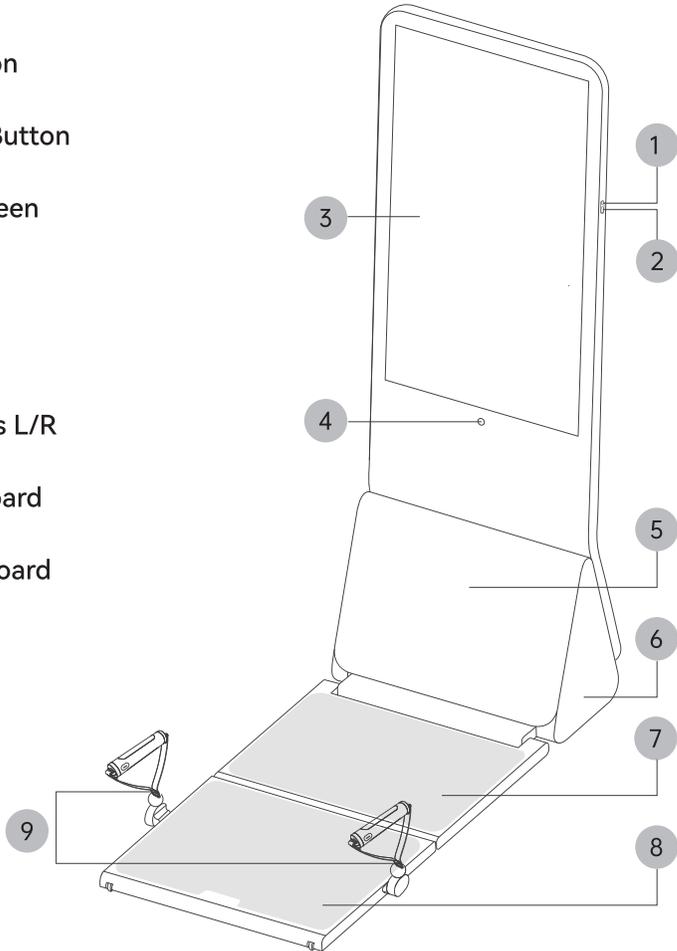

Product Diagram








- 10. Power Port
- 11. USB Port
- 12. Caster Wheels
- 13. Power Switch






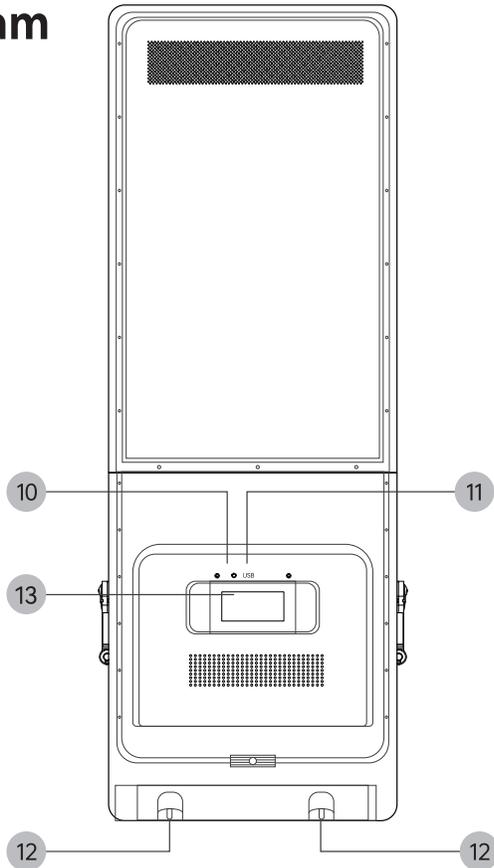


Specifications

Item: AEKE Smart Home Gym K1	Connectivity: Wi-Fi (2.4G & 5.0G), Bluetooth 5.0
Model Number: AMR2402-1	Unfolded Dimensions: 27.36in × 17.91in × 68.50in (W × L × H)
Rated Power: 1500W	Folded Dimensions: 27.36in × 57.80in × 68.50in (W × L × H)
Rated Voltage: 110-240V	Package Dimensions: 29.53in × 23.62in × 72.83in (W × L × H)
Net Weight: 80kg	Operating Temperature: 0°C to 45°C
Packaged Weight: 100kg	Storage Temperature: -20°C to 60°C

Package Contents
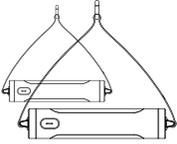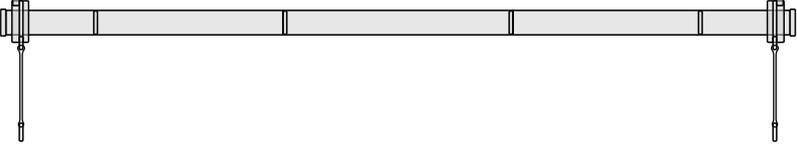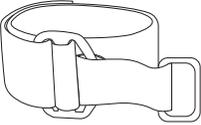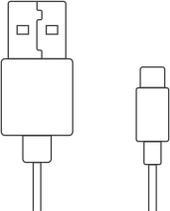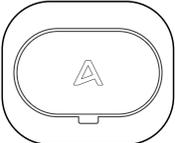
<p>AEKE Smart Home Gym K1</p> 	<p>Smart Grips</p> 
<p>Crossbar</p> 	
<p>Ankle Strap</p> 	<p>USB Cord</p> 
<p>Circular Buckle</p> 	<p>Unloader</p> 

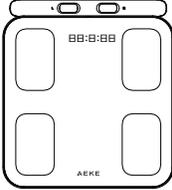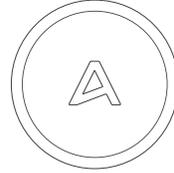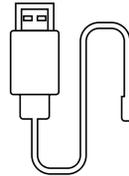Package Contents**Smart 8 Electrode Scale****Camera Cover****Heart Rate Armband****Heart Rate Armband Charger****Backup Cord****Power Cord**



INSTALLATION AND PLACEMENT.

03


It is recommended that users retain the outer packaging for a period after unboxing for future use (such as after-sales service or returns).




- This product requires no drilling for installation—it's ready to use right out of the box. Before use, remove all packaging materials, including the outer carton, foam protective shell, and any other coverings.
- Ensure the product is placed on a flat, hard surface such as marble, hardwood, or ceramic tiles. Do not place it on soft surfaces like carpets, rugs, or felt.
- Make sure the area around the product is clear of clutter, heavy objects, items that may tip over, or anything that could affect its stability or damage the mirror screen.
- Position the product in a well-ventilated indoor area, away from heat sources, and avoid direct sunlight exposure.
- Do not place the product in humid or wet areas to prevent rust or reduced insulation effectiveness.

Unpacking

- Rotate and remove the plastic latches in sequence from top to bottom.
- Squeeze and remove the latches on both sides of the box.
- After unfolding the outer packaging, remove the scale and the accessories box from the side.
- Remove the top cover, then take off the polystyrene foam protectors from both sides of the top.
- For the bottom polystyrene foam protectors, one person should tilt the machine slightly while another person removes the foam; repeat the process for the other side.
- Finally, carefully tilt and move the machine to remove the bottom support base.

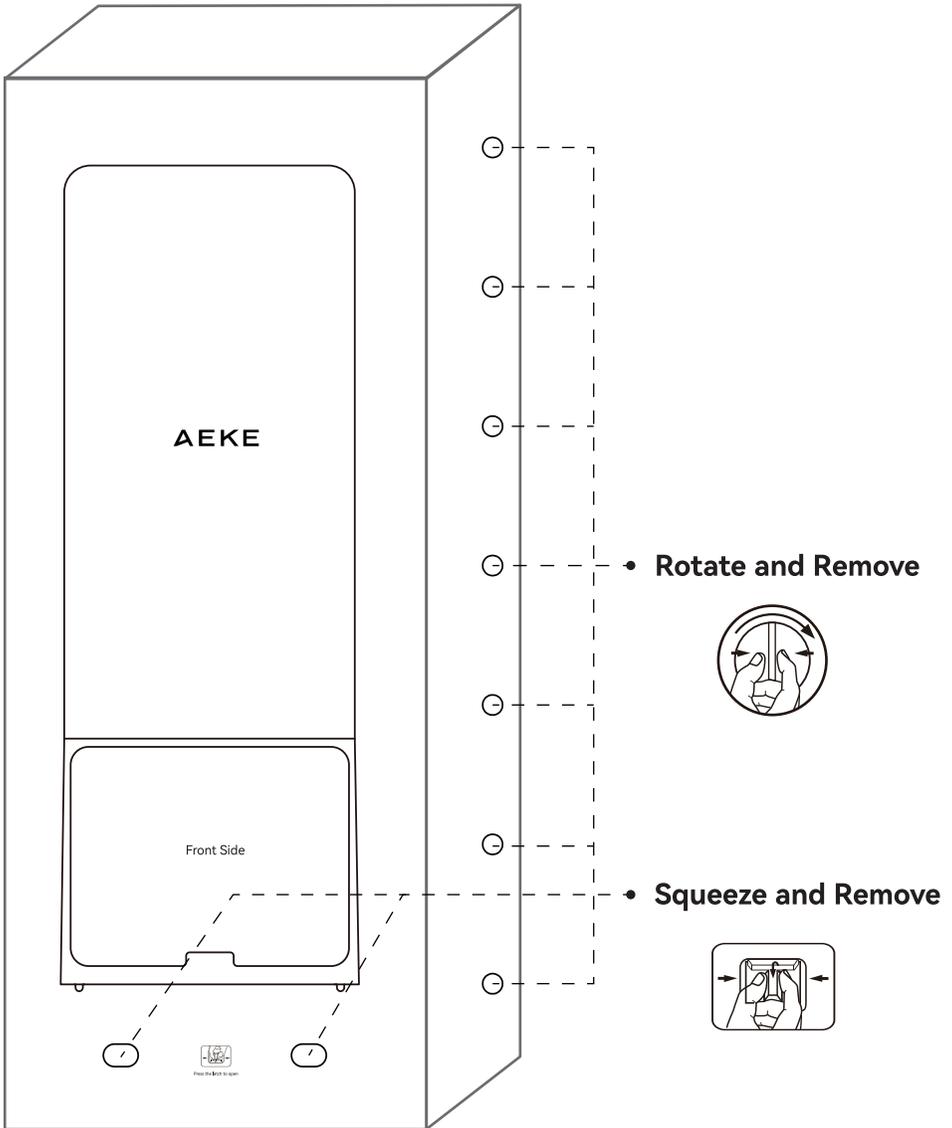


Moving

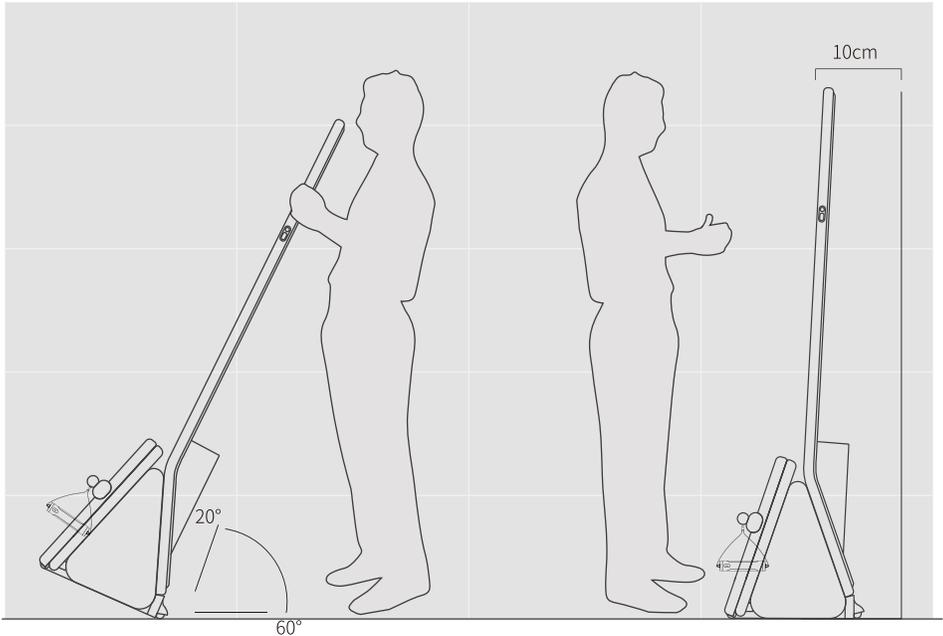

- Before moving the main unit, unplug the power cord and ensure the unit's power is turned off. During the moving process, operate within a safe tilt angle to prevent the unit from tipping over.
- When moving the main unit, position your body at the back of the unit, firmly grip the frame on both sides with your hands, tilt the unit backward at an angle of 20–55°, and use the auxiliary wheels to move it forward.
- Children are strictly prohibited from moving to the main unit.

Placement

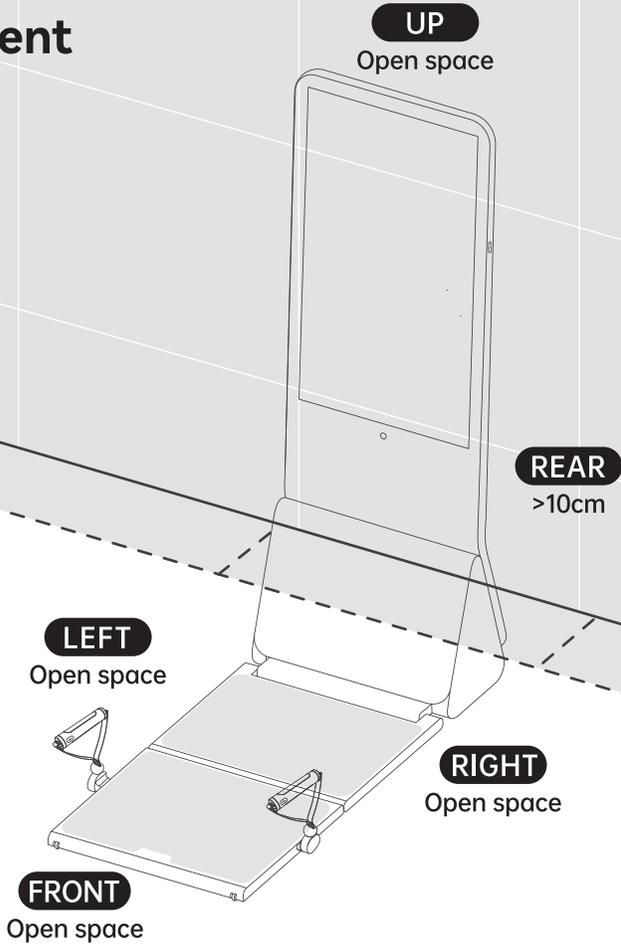

- Ensure the product is placed on a flat, hard surface (e.g., marble, solid wood, wood-like flooring, or tiles).
- The product must be positioned at least 10 cm away from the wall to avoid direct contact with the wall.
- AEKE will not be responsible for any issues arising from failure to follow these placement requirements.



PRODUCT OPERATION .


04

- * This section provides basic information. For detailed instructions, please refer to our official website at www.aeke.com.

Power On/Off


- After connecting the K1 to the power supply, turn on the power switch located at the bottom of the back of the unit, then briefly press Press and hold the button for 3 seconds, then release. The AEKE logo will light up.
- To power off, ensure the footboard are fully folded, the screen is off, and then turn off the main power switch.

Press the Power Switch
Turn on/off the Power

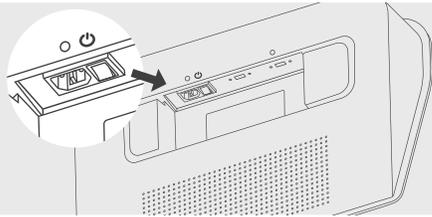

Standby Mode

- After use, briefly press the **Power On/Off Button** on the side of the K1 to turn off the screen and enter standby mode.
- To wake the screen, briefly press the **Power On/Off Button** on the side of the K1 for quick activation.

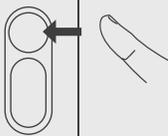


Briefly press the power on/off
button on the side of the K1

Bluetooth Connection

- Scan the QR code on the screen to download the AEKE App, then complete the registration and login process.




- In the app, navigate to **[Home] > [K1 Smart Home Gym] > [Add New Device]**. Follow the on-screen instructions to enable Bluetooth and location services on your phone, then proceed to the next step.
- From the Bluetooth search results, select the current K1 Smart Home Gym to complete the connection.

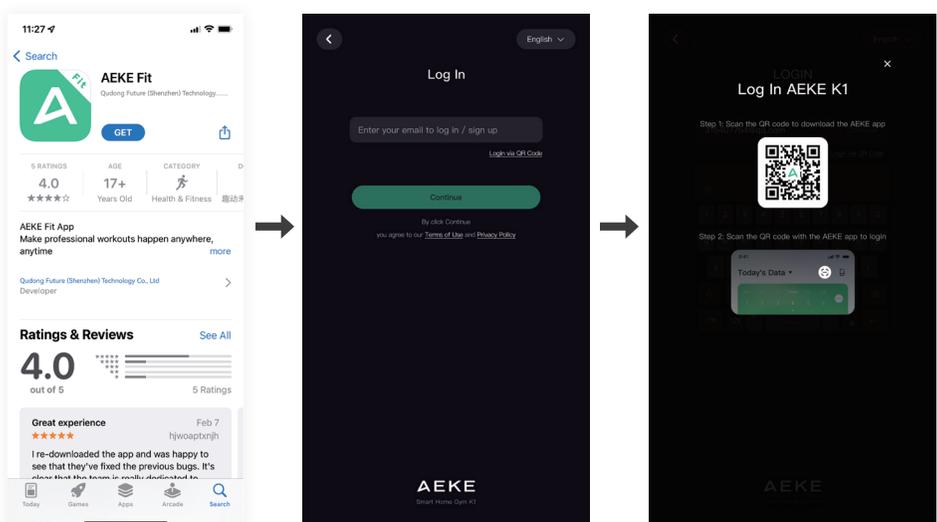


Wi-Fi Setup

Swipe down from the top of the mirror screen and select the [Wi-Fi] icon.

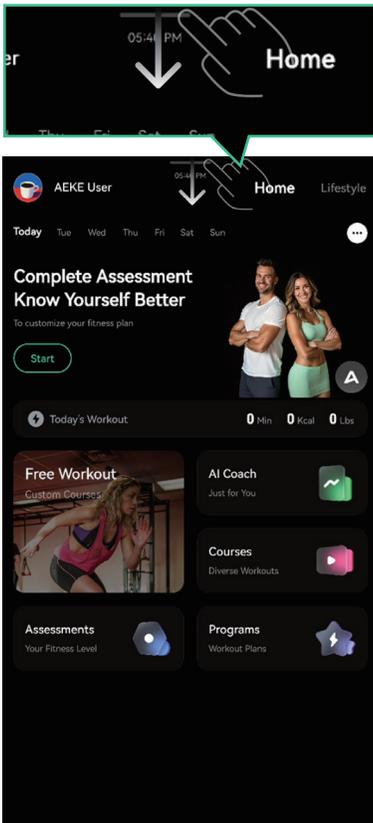

Choose the Wi-Fi network and enter the password to connect.

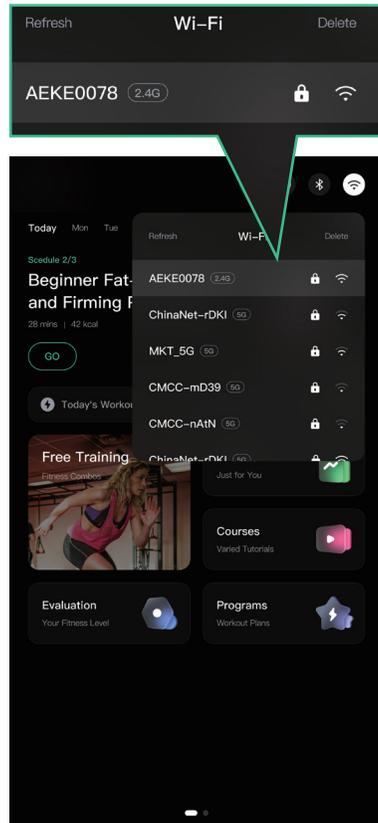


Footboard Unfolding and Folding

This product's footboard supports one-button unfolding and folding.


Using the Device

- Briefly press the footboard button on the side of the unit to automatically unfold the front and rear footboards.

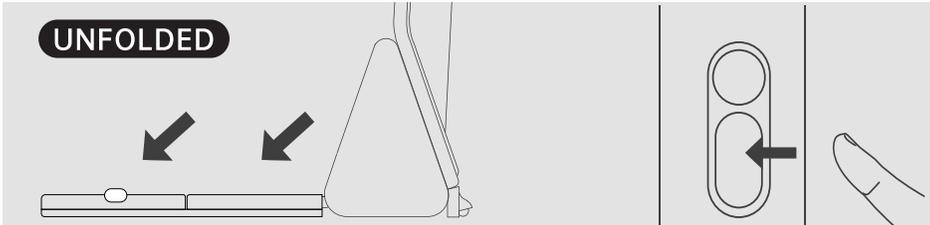

Storing the Device

- Briefly press the footboard button on the side of the unit to automatically fold the front and rear footboards.

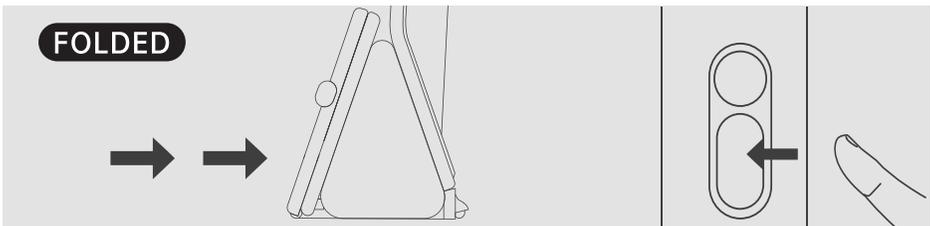


Footboard Safety Warnings



1.

Before unfolding the footboard, ensure there are no obstacles within 1.5 meters in front, no foreign objects on the ground, and no smart grips or crossbars attached to the pull cord interface.


1.5m

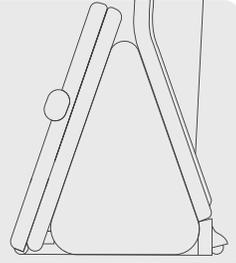

2.

When using the footboard for strength training, to minimize safety risks, ensure both feet are firmly planted on the footboard before using the smart grips or crossbar for exercises.



Stand Firmly
with Both Feet

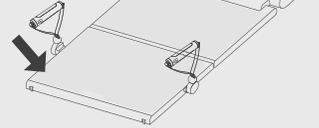

3.


Before folding the footboard, ensure that the smart grips or crossbar at the pull cord interface are fully retracted and that there are no foreign objects on or around the footboard surface.


Beware of
Foreign Objects

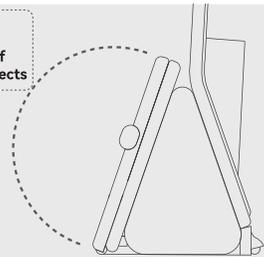

4.

During the unfolding or folding process, do not pull the cord, and keep children and pets away from the device to prevent hazards (e.g., pinching hands, feet, or other injuries).

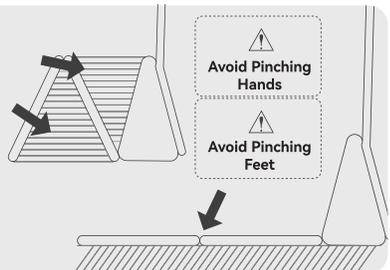






ACCESSORIES OVERVIEW.

05

SMART GRIP

Function Introduction:

- The Smart Grip can be quickly connected to the resistance cable, enabling a wide range of strength training exercises once combined.
- Equipped with a built-in Bluetooth module, the Smart Grip connects to the main unit via Bluetooth. During use, press the side release button to quickly release resistance.

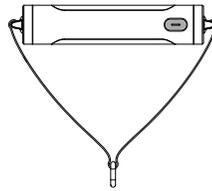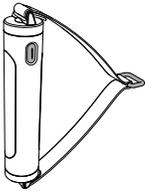


Bluetooth Connection:

- Pull down the K1 Bluetooth toolbar to search for devices.
- Power On: Ensure the Smart Grip has sufficient battery power, then lightly press the button until the grip vibrates and the white indicator light flashes.
- When the Smart Grip is detected, click to connect.
- Connection Successful: The green light flashes.
- Connection Disconnected: The white light flashes.
- Charging: The green light breathes (pulses).
- Charging Complete: The green light remains steady.
- Manual Power Off: Long-press the button until the grip vibrates and the indicator light turns off.
- Automatic Power Off: The Smart Grip automatically powers off and disconnects after 5 minutes of inactivity.



05

ACCESSORIES OVERVIEW

Press

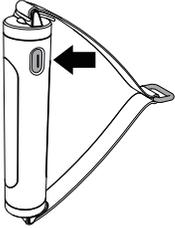


Light+Shake

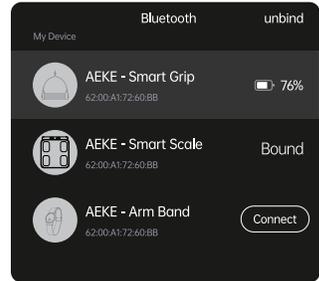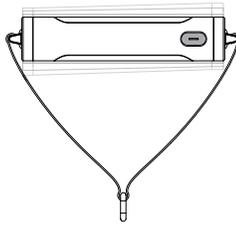

Use and Installation

- This product must be used with the pull cord. Before use, connect the buckle of the Smart Grip to the slot at the end of the pull cord and ensure a secure connection.
- To detach the grip, press the slot button for easy separation.

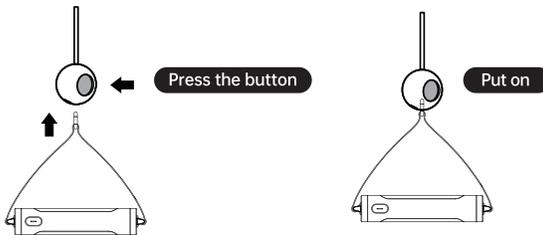

Attach

Press the button on the cord-lock and insert the square buckle of the accessory into the bayonet at the end. Ensure the accessory is securely attached to the cord-pull.



Detach

To remove the Smart Grip from the Smart Home Gym K1, press the button on the cord-lock and separate them.

05

ACCESSORIES OVERVIEW

Charging:

- The green light breathes (pulses).

Charging Complete:

- The green light remains steady.




- This product is equipped with a built-in lithium battery module. Before first use, ensure the product is fully charged.
- You may use the provided or a universally compatible Type-C charging cable to charge this product; however, the product does not support fast charging.

Maintenance and Care:

- This product is not waterproof; do not rinse directly with water or immerse it in water.
- To clean, gently wipe with a damp towel and allow it to air dry naturally.
- When not in use, store the Smart Grip in the designated storage compartment on the back of the main unit.

CROSS-BAR & UNLOADER

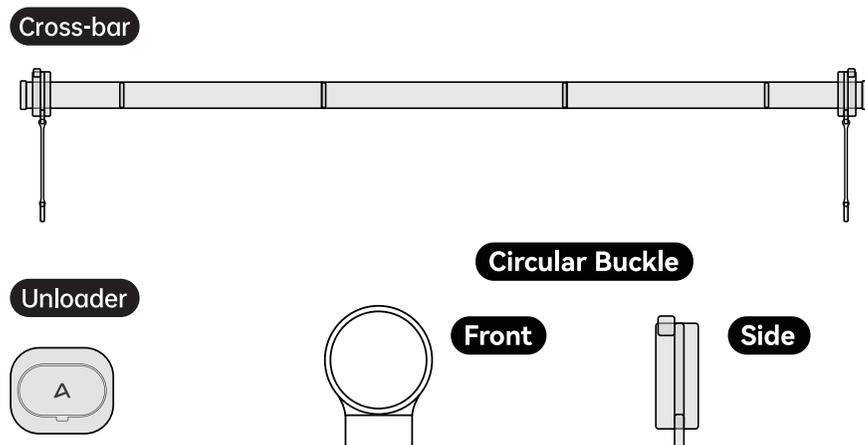

Function Introduction

- The Cross-Bar and Unloader are designed to work together, connecting quickly to the pull cord to enable a variety of strength training exercises.
- The Unloader includes a built-in Bluetooth module for connection to the main unit via Bluetooth.
- During use, lightly tap the Unloader to release resistance quickly.

Bluetooth Connection (Unloader)


- Before first use, remove the battery insulation film from the back of the Unloader.
- Briefly press the Unloader button. When the indicator light turns on, a connection prompt will appear on the K1 screen; click to connect.
- After connection, check the Unloader's status via the K1 Bluetooth Toolbar.

05

ACCESSORIES OVERVIEW

Use and Installation

The Cross-Bar and Unloader must be used together. Before use, attach the two circular buckles to the slots on the Cross-Bar.

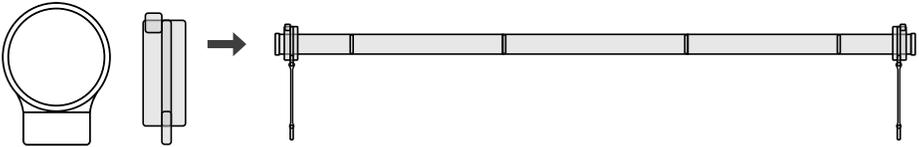

- Secure the Unloader to an appropriate position on the Cross-Bar and ensure a firm connection.
- To detach the Unloader, press the slot button for easy separation.



Charging Instructions

- The Unloader uses a CR2032 button battery and does not support charging.
- When the Unloader's battery is depleted, replace it. The initial battery life is approximately 3 months.

Maintenance and Care

- The Unloader is not waterproof. Do not rinse with water or immerse it in water.
- Clean by gently wiping with a damp towel and allow it to air dry naturally.
- When not in use, store the Unloader in the appropriate compartment on the back of the main unit.

05

ACCESSORIES OVERVIEW

Smart 8 Electrode Scale


- Refer to the Electrode Scale User Manual for details.

Heart Rate Armband

Front



Back




Side




*This product is intended for fitness assistance only and cannot replace medical advice.

Indicator Light

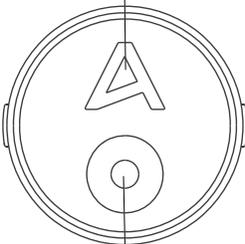


Power Button

Optical Heart Rate Sensor

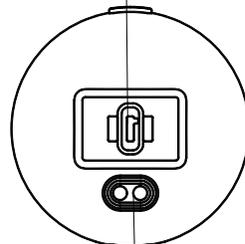

Charging Contacts

Magnetic Charging Cable




Function Introduction

- The sensor collects heart rate data. Once valid data is detected, the green light switches from fast flashing to slow flashing.
- This product features an auto-shutdown function: if no heart rate data is detected for over 90 seconds, it powers off automatically.
- The auto-shutdown function activates if no heart rate data is detected for over 90 seconds.

Wearing Instructions

- Wear on the upper arm, close to the inner elbow.
- Heart rate displays within 15 seconds.

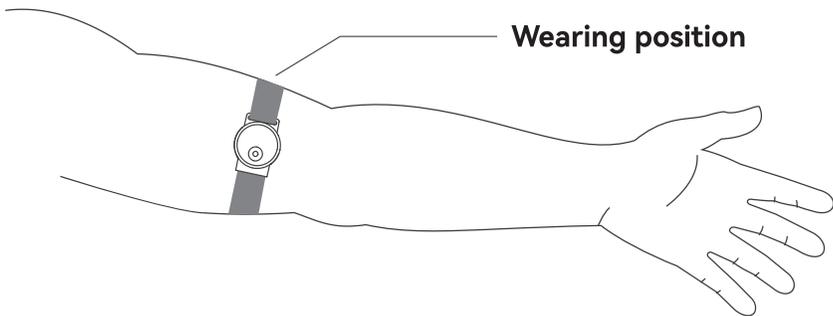

05

ACCESSORIES OVERVIEW

Bluetooth Connection

- Long-press the power button on the heart rate armband until the LED flashes green. Swipe down from the top of the mirror screen and select the [Bluetooth] icon.
- A connection window will appear on the screen; select the current [Heart Rate Armband] to connect.


Charging Instructions

- The device requires charging before first use.
- Use the provided charging cable with a DC 5V power adapter to charge the device.
- During charging, red and green lights flash alternately; when fully charged, the green light remains steady, indicating charging can stop.

Main Unit Assembly/Disassembly


Removing the Main Unit

Press the front of the main unit to remove it.

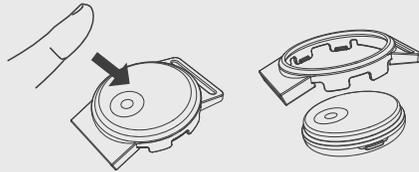


Installing the Main Unit

Align the protruding part of the main unit with the slot and snap it into place.

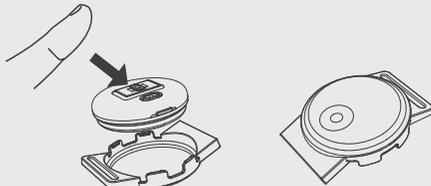

Camera Cover

Front

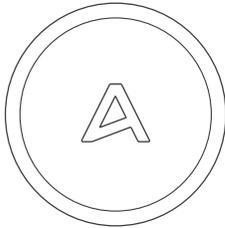


Side



Function Introduction

- The privacy cover has a built-in magnet and can be attached directly to the glass over the built-in camera on the screen to protect user privacy.

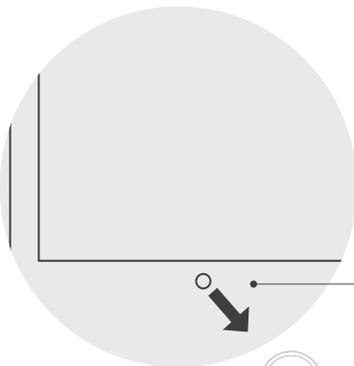

During exercise, remove the cover and attach it to the metal backplate of the main unit.

Camera



Attach directly to the screen.

Backup Cord

Instructions for Use

- The pull cord supports over 400,000 uses.
 - Intended for potential future maintenance or replacement.
 - Store carefully for safekeeping.
- * For instructions on replacing the Backup Cord, please reach out to our after-sales support team at support@aeke.com.




TROUBLESHOOTING .

06

1. SN Lookup

Profile > Settings > Device Info > Device SN

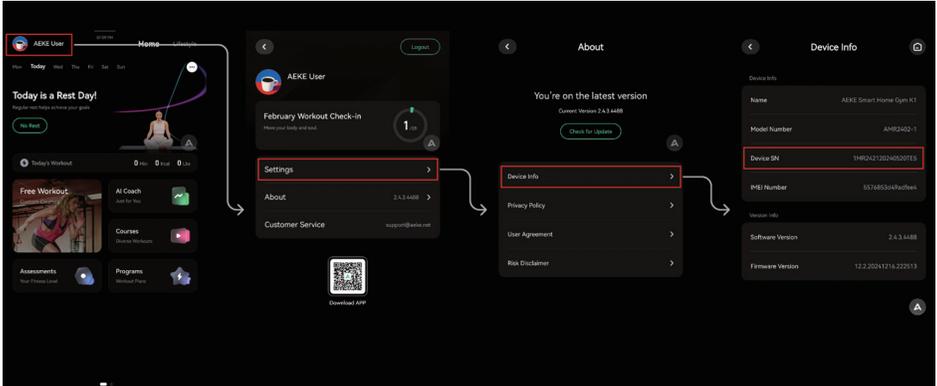

*AEKE technicians use the SN code to troubleshoot issues.

2. Common Issues

Cord Does Not Retract

- Try selecting [One-Click Cord Retraction] from the floating touch control A on the machine interface (illustration required).
- **Step 1 [Unresolved]:** Disconnect the main power, wait 30 seconds, then restart (illustration required).

No Sound from the Unit

- If there is no sound, adjust the volume and enter a music or workout session to check for audio (illustration required).
- **Step 1 [Unresolved]:** Disconnect the main power and restart to resolve (illustration required).

Body Measurement Failure

- This issue is typically due to operational errors, resulting in failure to measure body impedance. Refer to the instructional video, then perform the measurement. After selecting the measurement interface, have the user pull the grips, then stand barefoot on the Electrode Scale until it announces [Body Fat Measurement Complete] or the machine displays the measurement report (provide a link to the instructional video).
- **Step 1 [Unresolved]:** If unresolved, the Electrode Scale may have low battery power, indicated by an “L0” code; replace the batteries.

Fitness Bench Legs Won't Open

- The current fitness bench design uses a tight-fit mechanism. Pull the bench legs outward while pressing the leg button to open them (provide a link to the instructional video).

Machine Interface Freezes or Becomes Unresponsive

- If the screen does not respond to touch, long-press the side button for over 10 seconds to shut down, wait 30 seconds, then briefly press the power button for 3 seconds to restart.

3. Technical Support



Contact: support@aeke.com



MAINTENANCE AND CARE .

07

Notice: When cleaning the Product, unplug the power cord first.



1. Device Cleaning

- Solutions containing chemical substances may cause irreversible damage to the product's surface. Do not use any solution containing chemicals to wipe the product. If necessary, after powering off and unplugging the device, use a clean, soft, dry cotton cloth to gently clean the product's surface. Avoid repeated forceful wiping, and do not use coarse, hard materials or items with particulate residue to clean the product or its accessories to prevent damage.

2. Screen Maintenance

- Cleaning the screen requires the device to be powered off. It is recommended to use a damp towel or an alcohol-based wet wipe for cleaning, and ensure the screen surface is completely dry before powering on the device again to avoid affecting touch sensitivity.

3. Power Maintenance

- When the machine is not in use, it is recommended to long-press the side button for more than 10 seconds to power it off.
- After completing your evening workout, it is advised to long-press the side button to power off the device.

4. Cable Replacement

- The number of resistance cable uses can be checked via the machine interface. When using the resistance cable at 20 kg, contact AEKE after-sales support to request a cable replacement after reaching 60,000 pulls.

5. Prohibitions

- If the product accidentally gets wet, do not use a hairdryer's hot air to heat the affected areas.
- Disassembling the product on your own is prohibited, as it may cause product damage, personal injury, and void the warranty. Do not remove the back cover.
- For any adjustments or inspections of the product's internal components, please contact official customer service. Using non-original accessories for maintenance or replacement is strictly prohibited.

6. Precautions

- Do not modify this product or use it for purposes other than its original design intent.
- Do not attempt to reverse-engineer, modify, or perform improper upgrades to the product's software in any way.
- During use, do not cover the product with blankets, cloths, or other coverings to avoid obstructing heat dissipation.

**WARRANTY AND
AFTER-SALES SERVICE .**

08

Overview

This warranty outlines your rights for the AEKE Smart Home Gym. Additional rights may apply under local laws. Please read this section to understand the warranty terms and service process. For full legal details, consult your local regulations or visit www.aeke.com.

Limited Product Warranty

- AEKE warrants that your Smart Home Gym, when used and maintained per this manual, will be free from defects in materials and workmanship during the warranty period. Free repairs are provided for defects within this period. Outside the warranty period or for user-caused damage, paid repairs are available. This applies only to products purchased from AEKE or authorized dealers.

Warranty Period and Scope

- Starts on delivery date (per receipt, invoice, or order).
- If no proof of purchase, starts 30 days after factory delivery.

Device	Item	Standard Warranty Period
SMART HOME GYM	Motor, Screen, Power Supply, etc	24 months
FITNESS BENCH	Fitness Bench	12 months
Accessories	Smart Grip, Cross-bar, Unloader, Arm Band, Electrode Scale, etc	12 months

Free Repair Conditions

Free repairs apply if:

- Purchased from AEKE or authorized dealer.
- Defect occurs within warranty period (not user-caused).
- Used for personal/household purposes only.
- No unauthorized modifications or disassembly.
- Proof of purchase and serial number (SN) provided.

Exclusions

Warranty does not cover:

- Misuse or failure to follow this manual.
- Unauthorized repairs or non-AEKE parts.
- Extreme conditions (e.g., heat, corrosion).
- Normal wear (e.g., scratches, rust).
- Data loss from improper use.

How to Get Service

If your product fails within warranty, email support@aeke.com within 30 days of noticing the issue. Provide:

- Proof of purchase (e.g., receipt, order number).
- Serial number (SN).

AEKE will troubleshoot remotely. If needed, send the product for repair. For valid claims, AEKE covers costs. For non-warranty issues, you may pay for parts, labor, and shipping.

Contact Us:

- For support, email support@aeke.com. Expect a response within 24 hours, Monday through Saturday.
- For more details, visit www.aeke.com or refer to AEKE's privacy policy.

RETURN AND REFUND POLICY .

09

Overview

Not satisfied with your AEKE Smart Home Gym? You can request a return and refund within 30 days of receiving it, following this policy.

How to Return or Get a Refund

- Email support@aeke.com within 30 days of delivery.
- Include your order number, product name, quantity, reason for return, and photos/videos of the full packaging.
- We'll review your request within 2 business days.
- After we receive and check the returned product, we'll refund you using your original payment method.

Full Refund Conditions

You'll get a full refund if:

- You contact support@aeke.com within 30 days with valid proof of purchase (e.g., receipt or order number).
- The product has defects or quality issues right out of the box and is still in new or like-new condition.
- It's returned with all original packaging, accessories, and attachments.

Partial Refund Conditions

You'll get a partial refund if:

- The return isn't due to defects or quality issues.
- The product is missing accessories, attachments, or has visible damage (e.g., scratches, dents).
- It's not in its original packaging or was damaged due to poor packaging. We'll assess the condition and deduct fees, which we'll confirm with you.

No Refund Conditions

Refunds aren't available if:

- You request it more than 30 days after delivery.
- The product is damaged and can't be used or resold.
- Damage is from misuse, unauthorized changes, or not following this manual.
- Damage is due to events like fire or flood.
- The product is activated/registered (if applicable).
- It's a custom-made item.
- You don't have valid proof of purchase or it's been altered.
- Serial numbers don't match or are tampered with.

Refund Timing

Refunds go back to your original payment method within 7–14 business days after we receive and verify the product. Timing depends on your bank or card issuer.

- Delayed Refund? Check your bank account, then contact your card issuer. Still no refund? Email support@aeke.com.

Shipping Costs

- Defects: We cover shipping for returns due to quality issues within 30 days.
- Other Reasons: You pay shipping for returns not related to defects.

Issue	AEKE	Client
Non-quality issue return/exchange	✗	✓
Quality issue return/exchange	✓	✗
Repairs within the warranty period	✓	✗
Repairs outside the warranty period	✗	✓



FCC & CE STATEMENT .

10

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

RF Exposure Warning

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. To ensure compliance with FCC RF exposure guidelines, this device should be used at a minimum distance of 20 cm from the body during operation. This device must not be co-located or operated in conjunction with any other antenna or transmitter unless specifically authorized.

FCC ID:2BKQVAMR2401-1

Manufactured by: Qudong Future (Shenzhen) Technology Co., Ltd.

Address: 1001, Wanhai Building, No. 1031, Gongye 5th Road, Nanshan, Shenzhen, 518000, China

Product Name and Model:

AEKE K1 Smart Home Gym (Model: AMR2402-1)

Manufacturer:

Qudong Future (Shenzhen) Technology Co., Ltd.

Room 1001, Wanhai Building, No.1031, Gongye 5th Road, Nanshan, Shenzhen, China

Declaration of Conformity:

This product complies with the essential requirements and other relevant provisions of the EU Radio Equipment Directive (2014/53/EU).

Certification Number: GRCTC250102005

Testing Standards:

This product has passed the tests according to the following standards:

EMC: ETSI EN 301 489-1, ETSI EN 301 489-3, ETSI EN 301 489-17, EN 55032, EN 55035, EN IEC 61000-3-2, EN 61000-3-3

Radio: ETSI EN 300 328, ETSI EN 301 893, ETSI EN 300 440

Health: EN IEC 62311

Safety: EN IEC 62368-1

RF Exposure Information:


This device meets the EU requirements for exposure to radio waves and has been evaluated in accordance with EN IEC 62311. To ensure compliance with RF exposure guidelines, please maintain a distance of at least 20 cm from your body during use.

AEKE

STAY IN TOUCH



Instagram

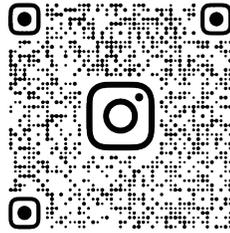

Facebook



Youtube

